







## DMX CHART – LUXIBEL B 5

### 1 Channel Mode

| Channel                                    | Number                                  | Function    |
|--|---|-------------|
| CH1 (008-255 all affected by sound active) | 000-007                                 | No function |
|  | 008-022                                 | Show 1      |
|  | 023-037                                 | Show 2      |
|  | 038-052                                 | Show 3      |
|  | 053-067                                 | Show 4      |
|  | 068-082                                 | Show 5      |
|  | 083-097                                 | Show 6      |
|  | 098-112                                 | Show 7      |
|  | 113-127                                 | Show 8      |
|  | 128-142                                 | show9 9     |
|  | 143-157                                 | Show 10     |
|  | 158-172                                 | Show 11     |
|  | 173-187                                 | Show 12     |
|  | 188-202                                 | Show 13     |
|  | 203-217                                 | Show 14     |
|  | 218-232                                 | Show 15     |
|  | 233-247                                 | Show 16     |
| 248-255                                    | Sound active, the static to performance |             |

### 4 Channel Mode

| Channel | Number  | Function   |
|---------|---------|--|
| CH1     | 000-255 | R dimmer  |
| CH2     | 000-255 | G dimmer  |
| CH3     | 000-255 | B dimmer  |
| CH4     | 000-255 | A dimmer  |

## 7 Channel Mode

| Channel | Number  | Function  |
|---------|---------|---|
| CH1     | 000-255 | The first light static colour choices (starting from the display) |
| CH2     | 000-255 | The second static colour choices                                  |
| CH3     | 000-255 | The third static colour choices                                   |
| CH4     | 000-255 | The fourth static colour choices                                  |
| CH5     | 000-255 | The fifth static colour choices                                   |
| CH6     | 000-255 | All dimmer - from dark to bright                                  |
| CH7     | 000-255 | Channel switch, strobe, fade (from dark to bright)                |

## 20 Channel Mode

| Channel | Number  | Function                          |
|---------|---------|-----------------------------------|
| CH1     | 000-255 | The first LED - R dimmer, 0-100%  |
| CH2     | 000-255 | The first LED - G dimmer, 0-100%  |
| CH3     | 000-255 | The first LED - B dimmer, 0-100%  |
| CH4     | 000-255 | The first LED - A dimmer, 0-100%  |
| CH5     | 000-255 | The second LED - R dimmer, 0-100% |
| CH6     | 000-255 | The second LED - G dimmer, 0-100% |
| CH7     | 000-255 | The second LED - B dimmer, 0-100% |
| CH8     | 000-255 | The first LED - A dimmer, 0-100%  |
| CH9     | 000-255 | The third LED - R dimmer, 0-100%  |
| CH10    | 000-255 | The third LED - G dimmer, 0-100%  |
| CH11    | 000-255 | The third LED - B dimmer, 0-100%  |
| CH12    | 000-255 | The first LED - A dimmer, 0-100%  |
| CH13    | 000-255 | The fourth LED - R dimmer, 0-100% |
| CH14    | 000-255 | The fourth LED - G dimmer, 0-100% |
| CH15    | 000-255 | The fourth LED - B dimmer, 0-100% |
| CH16    | 000-255 | The first LED - A dimmer, 0-100%  |
| CH17    | 000-255 | The fifth LED - R dimmer, 0-100%  |
| CH18    | 000-255 | The fifth LED - G dimmer, 0-100%  |
| CH19    | 000-255 | The fifth LED - B dimmer, 0-100%  |
| CH20    | 000-255 | The first LED - A dimmer, 0-100%  |