

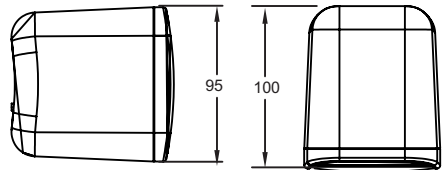




A NEO 3 carton contains two loudspeakers (black or white) and two plastic wall-mount brackets.

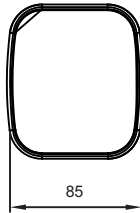

The connection type is selected through switch (10W position for line, 8Ω for low impedance)

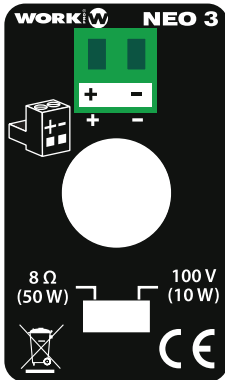

Make sure to select the correct power tap position before connecting the loudspeaker to a 70/100V line amplifier. If the low impedance position (8Ω) is selected, the loudspeaker could be damaged!

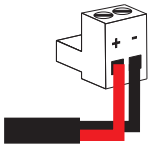


The connection is made through Euroblock terminals. Ensure the correct polarity is observed.

(*) Power Taps (70V).....	5W(980Ω)
Power Taps (100V).....	10W(1kΩ)
Power handling (8Ω)	50W RMS (with overload protection)
Sensitivity (1W/1m)	87 dB
Max. SPL (1m)	100 dB
Frequency Response	150Hz - 20kHz
Elements.....	2.5" Woofer
Dimensions	85 x 95 x 100 mm
Material (enclosure)	ABS plastic
IP rating	IP 54
RAL colour code	RAL 9003 (W) / RAL 9004 (B)
Material (grille)	Aluminium
Weight	0,5 Kg

(*) The power taps indicated on the selector switch are calculated for 100V line. In the case of 70V line installation, each power tap will correspond to half the value.

Specifications are subject to change without notice

Wall-mount bracket

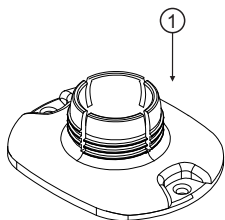

1	Rear wall mounting part
2	Threaded Ball
3	Locking nut
4	Fixation screw (x2)

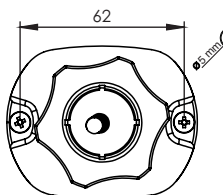
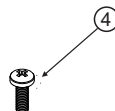
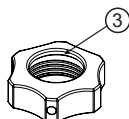
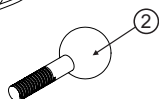


figure 1

Use the wall mounting part (1) to mark the fixing points on the wall. Take into account the dimensions between holes and the diameters marked in figure 1.

Drill wall and insert wall fixings. Screw wall mounting part to wall. Ensure that suitable screws and wall fixings are used. If in any doubt contact a suitably qualified expert.

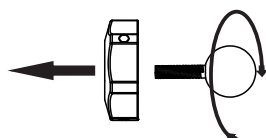


figure 2

Pass the threaded ball piece (2) through the fixation nut (3) and screw it directly over the loudspeaker

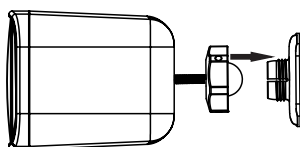


figure 3

Move the complete set (loudspeaker+ ball threaded + locking nut) to the wall-mount piece (1). See figure 3.





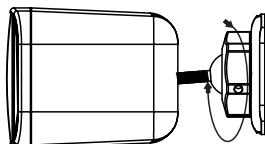


figure 4

Screw the locking nut (3) until to achieve a good fixation. During this process, you can move the loudspeaker in order to obtain the desired emission angle. After finished this process you can tighten the locking nut. See figure 4.


Un set de NEO 3 contiene dos altavoces (color blanco o negro) y 2 soportes de pared de plástico.

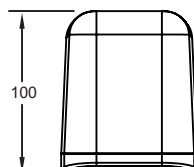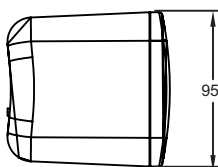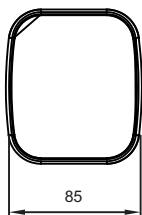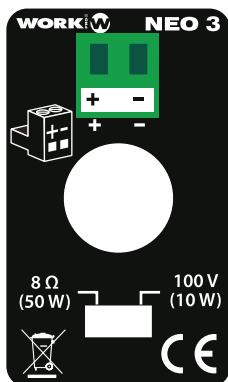

El tipo de conexión se selecciona mediante el conmutador (posición de 10W para line, 8Ω para baja impedancia)



Asegúrese de seleccionar la correcta posición de potencia antes de conectar el altavoz a un amplificador de línea 70/100V. Si se selecciona la posición de baja impedancia (8Ω), el altavoz puede dañarse.

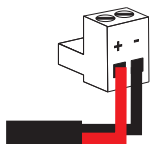


El conexionado se realiza mediante terminales Euroblock. Asegúrese de la correcta polaridad.

(*) Potencia (70V).....	5W(980Ω)
Potencia (100V).....	10W(1kΩ)
Potencia a baja impedancia	(8Ω) 50W RMS (con protecc. de sobrecarga).
Sensibilidad (1W/1m)	87 dB
Max. SPL	100 dB
Respuesta en Frecuencia	150Hz - 20kHz
Elementos.....	2.5" Woofer
Dimensiones	85 x 95 x 100 mm
Material (recinto)	Plástico ABS
Rango IP	IP 54
Código color RAL	RAL 9003 (W) / RAL 9004 (B)
Material (rejilla)	Aluminio
Peso	0,5 Kg

(*) Las posiciones indicadas en el selector están calculadas para línea de 100V. En el caso de una instalación de línea 70V, cada posición de potencia corresponderá a la mitad del valor.

Las especificaciones están sujetas a cambio sin previo aviso.

Soporte de pared

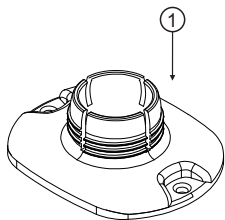

1	Pieza de fijación a la pared
2	Rótula
3	Tuerca de Bloqueo
4	Tornillo de fijación (x2)

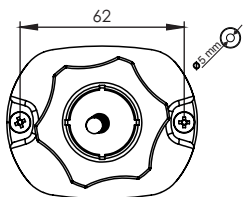
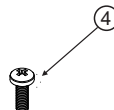
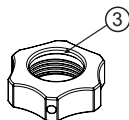
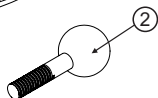


figura 1

Use la pieza de montaje a la pared (1) para marcar los puntos de fijación. Tenga en cuenta las dimensiones entre agujeros y los diámetros marcados en la figura 1.

Realice los taladros e inserte los elementos de fijación. Atornille el soporte a la pared. Asegúrese de utilizar los tornillos y fijaciones a la pared adecuados. En caso de duda, consulte con un experto.

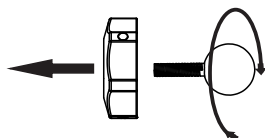


figura 2

Deslice la rótula (2) a través de la tuerca de bloqueo (3) y atornillela directamente sobre la caja acústica.

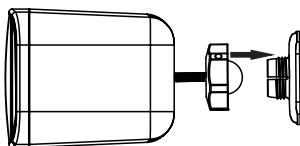


figura 3

Mueva el conjunto completo (caja acústica + rótula + tuerca de bloqueo) hacia la pieza de fijación de pared (1). Ver figura 3.

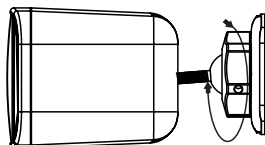


figura 4

Atornille la tuerca de bloqueo (3) hasta lograr una buena fijación. Durante este proceso, puede mover la caja acústica para obtener el ángulo de emisión deseado. Después de finalizar este proceso, puede apretar firmemente la tuerca de bloqueo. Ver figura 4.